

JascoPro Series Z-Wave Plug-in Smart Switch



Specifications

Power: 125VAC, 60Hz **Signal Frequency:** 908.4/916MHz

Maximum Load for Controlled Outlet: 1250W (10A) tungsten, 1/2HP motor or 1875W (15A) resistive

Maximum Load for Pass-Through Outlet or Both Outlets Combined: 1875W

Classic Range: Up to 150ft. line of sight to the wireless controller and closest Z-Wave receiver module

Long Range: Up to 1,300ft. line of sight to the wireless controller

Operating Temperature: 32-104° F (0-40° C)

Z-Wave Module: 800 series

Warranty: 5-year limited product warranty

For indoor use only


Design Features

- One Z-Wave controlled outlet and one pass through for LED, CFL, incandescent and halogen lights as well as small appliances
- Remote ON/OFF operation via the Z-Wave controller
- Manual ON/OFF control with the front push button
- Remotely monitor with any mobile device*
- Can be included in multiple groups and scenes
- Supports Z-Wave Long Range and standard Z-Wave based on hub capabilities
- Uses the Z-Wave firmware update meta data command class for standardized firmware updates over the air
- Retractable security tab secures the plug to the wall outlet

- Z-Wave Plus certified
- Trilingual instruction manual – English, French, Spanish

Z-Wave Plus Features

- Works with Z-Wave Classic and Z-Wave Plus Products
- 50% more wireless range
- 250% faster processor
- 400% more memory
- 50% more energy efficient
- Supports wireless upgrades to future-proof your home

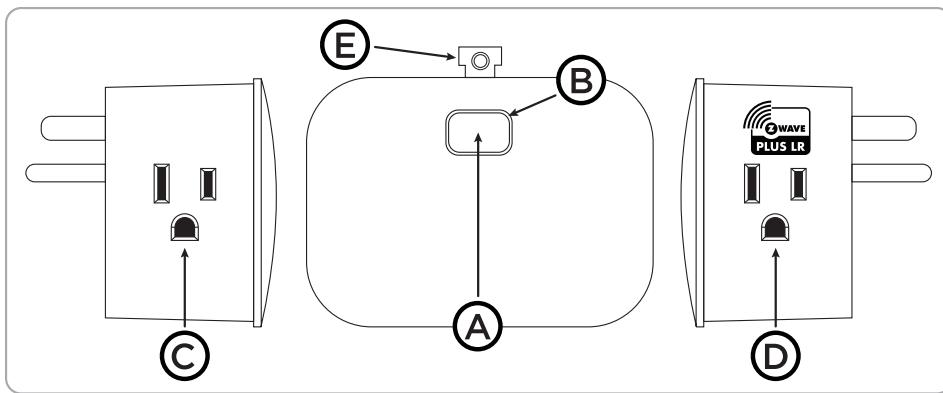

- A. Manual/program button**
Single press – turn ON/OFF the device
Single press – include or exclude in Z-Wave network
- B. LED indicator**
- C. Always-on outlet** – provides continuous power
- D. Z-Wave controlled outlet** – remotely turn ON/OFF the connected device
- E. Security tab** – secures the plug to the wall outlet

Device Configuration

Adding your device to a Z-Wave network

1. Follow the instructions for your Z-Wave certified controller to add a device to the Z-Wave network.
2. Once the controller is ready to add your device, press the program button of the smart switch.

You have complete control to turn your lamp ON/OFF according to groups, scenes, schedules and interactive automations programmed by your controller.

If your Z-Wave certified controller features remote access, you can control your lamp from your mobile devices.

If prompted by the controller to enter the S2 security code, refer to the QR code/security number on the side of the box or the QR code label on the product (see Figure 1). Enter the 5-digit code.




Figure 1

To remove and reset the device

1. Follow the instructions for your Z-Wave certified controller to remove a device to the Z-Wave network.
2. Once the controller is ready to remove your device, press the program button of the smart switch.

To return to factory defaults

1. If plugged in, unplug the switch from the receptacle.
2. Press and hold the program button for at least three seconds while you plug the switch into a receptacle.

NOTE: This should only be used if your network's primary controller is missing or otherwise inoperable.

NOTE: SmartStart enabled products can be added into a Z-Wave network by scanning the QR code on the product with a controller providing SmartStart inclusion. No further action is required and the SmartStart product will be added automatically within 10 minutes of being switched on in the network vicinity.

Certifications & Compliances



Compliances, specifications and availability are subject to change without notice.

Distributed by Jasco Products Company LLC
10 E. Memorial Rd., Oklahoma City, OK 73114.

Questions? Contact our U.S.-based dedicated support at
1-833-981-0170, M-F, 7AM-8PM Central Time.

©Jasco 2024

Related Products - Z-Wave Plug-In Smart Controls



76723
Plug-in Smart
Dimmer



79244
Plug-in Smart
Switch



Scan to see full line
of products or visit
jascopro.com